



## Assembly Instructions



(W x D x H) 0.60m x 0.60m x 2m  
Product Name: Snowdon Obelisk

Pressure Treated products should not be treated with any other products for the first month.

**PLEASE KEEP THESE INSTRUCTIONS**

Zest4Leisure  
01352 752555 option 1 – sales@zest4leisure.co.uk


# Snowdon Obelisk Assembly Instructions

Requires 2 person assembly.

Tools required: Corded / Cordless Drill, Pozi-drive Bit / Screwdriver, 3mm Drill Bit required in order for you to drill all screw holes before construction.

Snowdon Obelisk Pack List		
Item	Description	Quantity
A	Trellis Panel	4
B	Cap	1

Fixings		
	30mm Screws	12
	45mm Screws	4

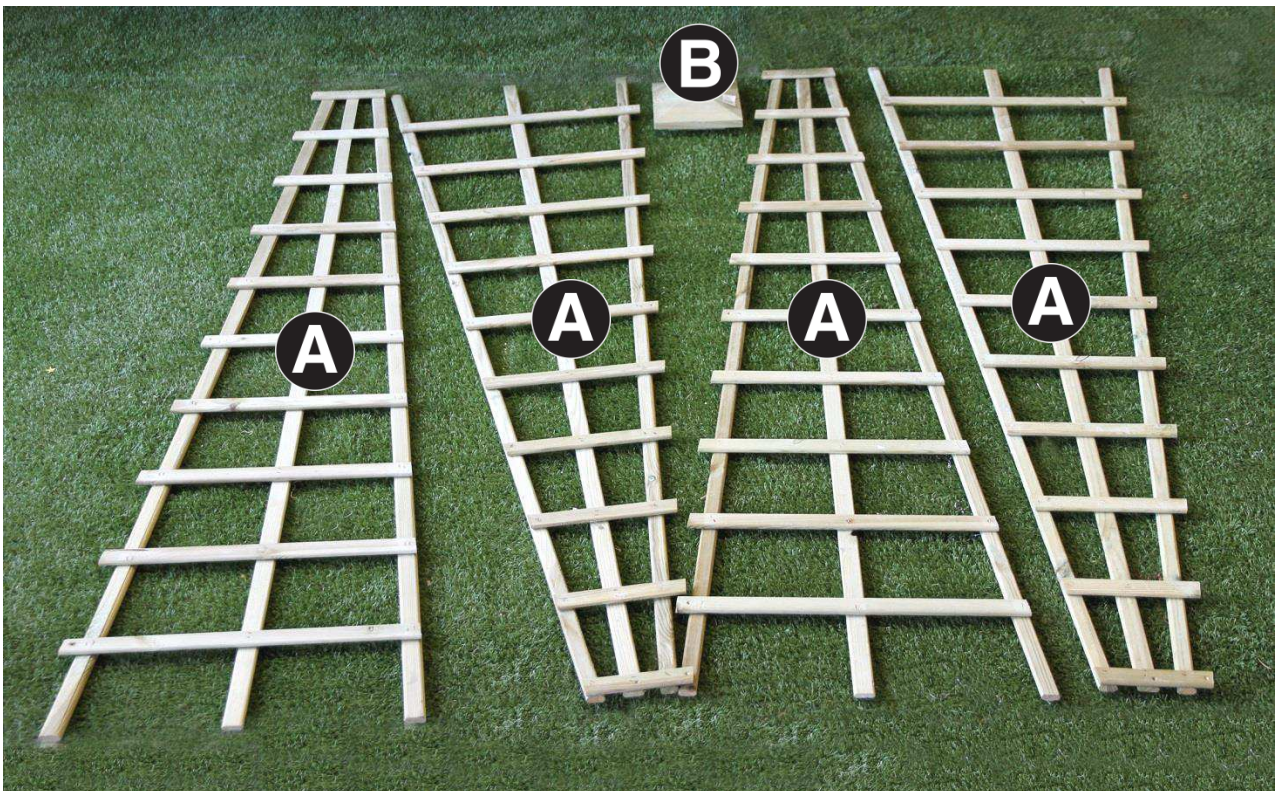

**Please take a few moments to check all pack contents listed on page 1 of the Assembly Instructions.**

**Assembly requires 2 persons. All screw holes to be pre-drilled.**


**Tools required: Corded/Cordless Drill, Pozidrive Bit/Screwdriver, 3mm Drill Bit required in order for you to drill all screw holes before construction.**

- 1.** Align two Trellis Panels (A) together as shown in Fig 1a. Ensuring that predrilled screw holes are positioned in overlap of horizontal batten (See arrows in Fig 1a), and that horizontal battens face outwards, fix panels together using 3no 30mm screws (See Figs.1b, 1c & 1d). Repeat to attach subsequent panels to form a square (tapered) obelisk.
  
- 2.** Locate Cap (B) into top of obelisk and fix in position using 4no 45mm screws (See Figs 2a & 2b)

**Snowdon Obelisk is now complete.**



1a

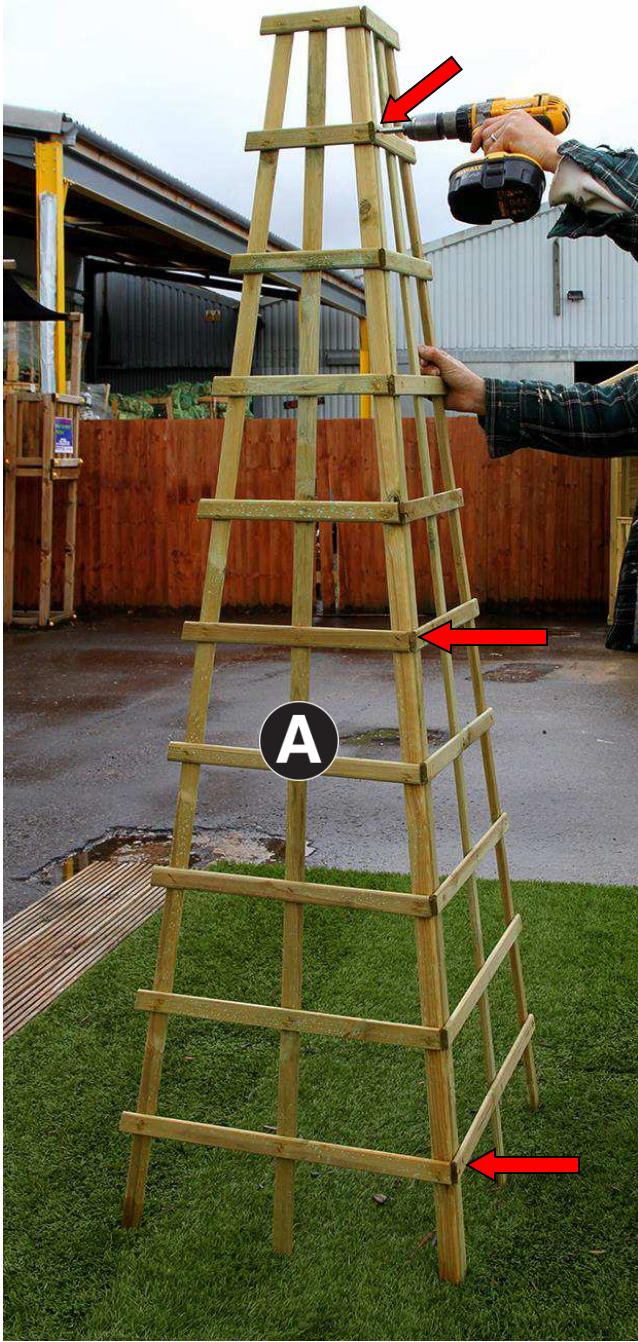

1b




1c



1d



2a

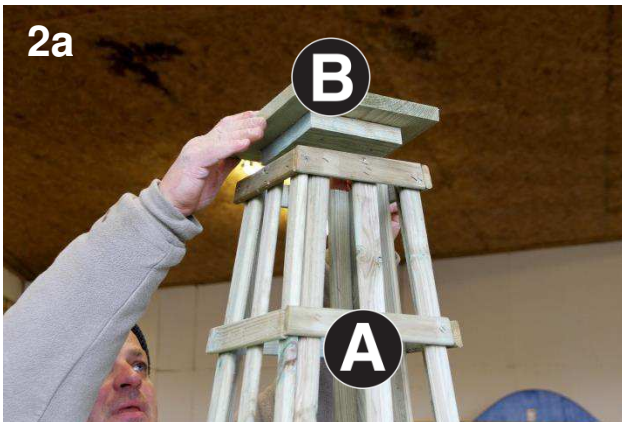

2b

